

## SUMMARY TABLE OF CONTROLS N-COM B4

		<b>Button</b>		▲		▼		▲▼	
		<b>on</b>	<b>on</b>	▲	▲	▼	▼	▲▼	▲▼
		<b>Pressure</b>		Brief	Long	Brief	Long	Brief	Long
<b>Basic Functions</b>	Turning on		X (2s)						
	Turning off		X (5s)						
	Increase Volume			X					
	Decrease Volume					X			
	Scroll menu (Base, Radio, Bike to bike)		X (2s)						
<b>Bluetooth peripheral</b>	Answer phone call	X		X		X			
	Voice call		X (4s)						
	Hang up/reject a phone call		X (2s)						
	Redial last number							X	
	Mobile phone connection		X (4s)						
	Mobile phone disconnection								X (4s)
	Call transfer								X (4s)
	Activate Conference Mode	X							
<b>Base Menu</b>	Activate audio via cable				X (2s)				
	Deactivate audio via cable						X (2s)		
	Connect A2DP device				X (2s)				
	Disconnect A2PD device						X (2s)		
	Play music (Play)				X (2s)				
	Pause Function (Pause)				X (2s)				
	Next track (Forward)				X (4s)				
	Activate intercom	X							
	Deactivate intercom	X							
<b>Radio menu</b>	Automatic search for new station				X (2s)				
	Change station (pre-set stations)						X (2s)		
	Pre-set station				X(4s)				
<b>Bike to Bike Menu</b>	Answer call Bike-to-Bike	X		X		X			
	Intercom swap (from Bike-to-Bike to Rider-Pillion Passenger)*	X		X					
	Connection to Bike 1				X (2s)				
	Connection to Bike 2						X (2s)		
	Connection to Bike 3				X (4s)				
	Connection to Bike 4						X (4s)		
<b>Setting</b>	Pairing up mode - system turned off		X (4s)						
	Rider-Passenger intercom pair up	X							
	Bike 1 pair up				X (2s)				
	Bike 2 pair up						X (2s)		
	Bike 3 pair up				X (4s)				
	Bike 4 pair up						X (4s)		
	Bike-to-Bike menu enabling/disabling								X
	Erase pair ups**								X (4s)

\*Briefly press at the same time.

\*\*With N-Com system in Pairing up Mode.