

# SUMMARY TABLE OF CONTROLS N-COM BX5

- Standard Configuration -

<i>Button</i>		n	on	n + on	▲	▼	▲ + ▼
<b>Basic Functions</b>	Turning on		2 sec				
	Turning off		6 sec				
	Increase Volume				X		
	Decrease Volume					X	
<b>Bluetooth Devices</b>	Answer phone call	X	X		X	X	
	Voice call		2 sec				
	Redial last number			X			
	Dial Friend Number	2 sec					
	Hang up/reject a phone call		2 sec				
	Call transfer			2 sec			
	Manual Device Connection		2 sec				
	Manual Device Disconnection				4 sec		
	Turning on the Conference function	X					
	Turning off the Conference function	X					
<b>Intercom</b>	Connection CHANNEL 1	X					
	Disconnection of active intercom	X					
	Calling CHANNEL 2	x2					
	Calling CHANNEL 3	x3					
<b>Bluetooth Music / Cable</b>	Play music (Play)		X				
	Pause Function (Pause)		X				
	Next track (Forward)				2 sec		
	Previous track (REW)					2 sec	
	Enable A2DP profile		X				
	Disable A2DP profile		4 sec				
	Activate audio via cable		x3				
	Deactivate audio via cable		x3				
<b>Radio Menu</b>	Turning on the Radio		x2				
	Turning off the Radio		x2				
	Automatic search for new station				2 sec		
	Change station (pre-set stations)					2 sec	
	Pre-set station					4 sec	
<b>Setting*</b>	Pairing up mode (system turned off)		4 sec				
	Turning on/off the RDS					X	
	Turning on/off the Smart Navi System				2 sec		
	Pairing up secondary mobile phone (or device)		2 sec				
	Pairing up CHANNEL 1	X					
	Pairing up CHANNEL 2	x2					
	Pairing up CHANNEL 3	x3					
	Pairing up CHANNEL 4**		X				
	Pairing up CHANNEL 5**		x2				
	Pairing up CHANNEL 6**		x3				
Reset						4 sec	

\* All the Setting functions must be carried with the system in Setting Mode.

\*\*With Friends Configuration active.

**- Friends Configuration -**

<b>Button</b>		<b>n</b>	<b>on</b>	<b>n + on</b>	<b>▲</b>	<b>▼</b>	<b>▲ + ▼</b>
<b>Basic Functions</b>	Turning on		2 sec				
	Turning off		6 sec				
	Increase Volume				X		
	Decrease Volume					X	
<b>Bluetooth Devices</b>	Answer phone call	X	X		X	X	
	Voice call		2 sec				
	Redial last number			X			
	Dial Friend Number	4 sec					
	Hang up/reject a phone call		2 sec				
	Call transfer			2 sec			
	Manual Device Connection		2 sec				
	Manual Device Disconnection				4 sec		
	Turning on the Conference function	X					
	Turning off the Conference function	X					
<b>Intercom</b>	Connection CHANNEL 1	X					
	Disconnection of active intercom	X					
	Calling CHANNEL 2	x2					
	Calling CHANNEL 3	x3					
	Calling CHANNEL 4		X				
	Calling CHANNEL 5		x2				
	Calling CHANNEL 6		x3				
<b>Bluetooth Music / Cable</b>	Play music (Play)			2 sec			
	Pause Function (Pause)			2 sec			
	Next track (Forward)				2 sec		
	Enable A2DP profile			2 sec			
	Disable A2DP profile					4 sec	
	Activate audio via cable					2 sec	
	Deactivate audio via cable					2 sec	
<b>Radio Menu</b>	Turning on the Radio	2 sec					
	Turning off the Radio	2 sec					
	Automatic search for new station				2 sec		
	Change station (pre-set stations)					2 sec	
	Pre-set station					4 sec	
<b>Setting*</b>	Pairing up mode (system turned off)		4 sec				
	Turning on/off the RDS					X	
	Turning on/off the Smart Navi System				2 sec		
	Pairing up secondary mobile phone (or device)		2 sec				
	Pairing up CHANNEL 1	X					
	Pairing up CHANNEL 2	x2					
	Pairing up CHANNEL 3	x3					
	Pairing up CHANNEL 4**		X				
	Pairing up CHANNEL 5**		x2				
	Pairing up CHANNEL 6**		x3				
Reset						4 sec	

\* All the Setting functions must be carried with the system in Setting Mode.

\*\*With Friends Configuration active.